

### PARTS

- A) Tri-Port Access Plate
- B) Air-gap Assembly
- C) Check Valve
- D) Water Inlet Valve
- E) Float
- F) Grommet
- G) Screws
- H) Sealing Compound

The Bushman auto fill device may be used to add city water into your tank. A city water backup is critical to the function of an automated system. If your tank runs out of rainwater the autofill kit will supply city water as a backup until the tank receives rain again. The float can be set to only fill the bottom 5% of your tank with city water leaving the remaining 95% available for rain. If your system uses an in-tank pump the tri-port plate also provides openings for the pump's electrical cord and water output.



### PERFORMANCE

