 
 


PRODUCT DIMENSIONS

Rain Barrel Outlet

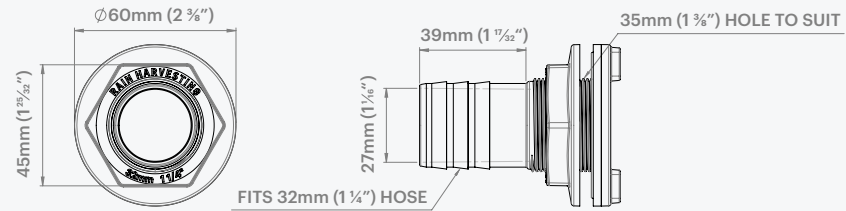

1.2m (4 ft) length hose - 32mm (1 1/4") diameter

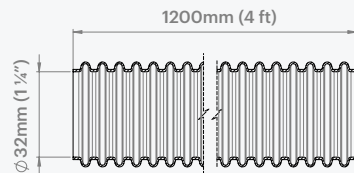

DISCLAIMER This product specification is not a complete guide to product usage. Further information is available from Rain Harvesting Pty Ltd and from the Installation and Operating Instructions. This specification sheet must be read in conjunction with the Installation and Operating Instructions and all applicable statutory requirement. Product specifications may change without notice. © Rain Harvesting Pty Ltd.

 
RAIN HARVESTING
by Blue Mountain Co

+61 (0)7 3248 9600

rainharvesting.com.au

RAIN HARVESTING
by Blue Mountain Co

Rain Barrel Linking Kit

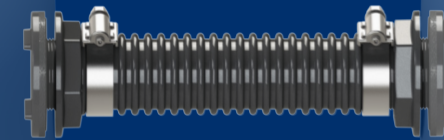

Installation and Specification Guide

PRODUCT DETAILS

Easily connect multiple rain barrels together to maximise your storage.

RBLK01

FEATURES AND BENEFITS

- All fittings and hose included
- Easily installed with the included hole saw
- Hose suits 32mm (1 1/4") diameter fittings
- Connect almost any rain barrels together
- Matches the components in our range of Rain Harvesting Downpipe Diverter

Installation

WHAT'S IN THE BOX?

 
- Rain Barrel Outlet x 2
- 1.2m (4 ft) length hose - 32mm (1 ¼") diameter
- Stainless steel hose clamps x 2
- Hole saw - 35mm (1 ½")

TOOLS/MATERIALS YOU MAY REQUIRE

- Cordless drill
- Spanner
- Marker pen
- Spirit level
- Knife
- Screwdriver

HOW IT WORKS

The Rain Barrel Linking Kit allows you to connect multiple rain barrels together to maximise your water storage.

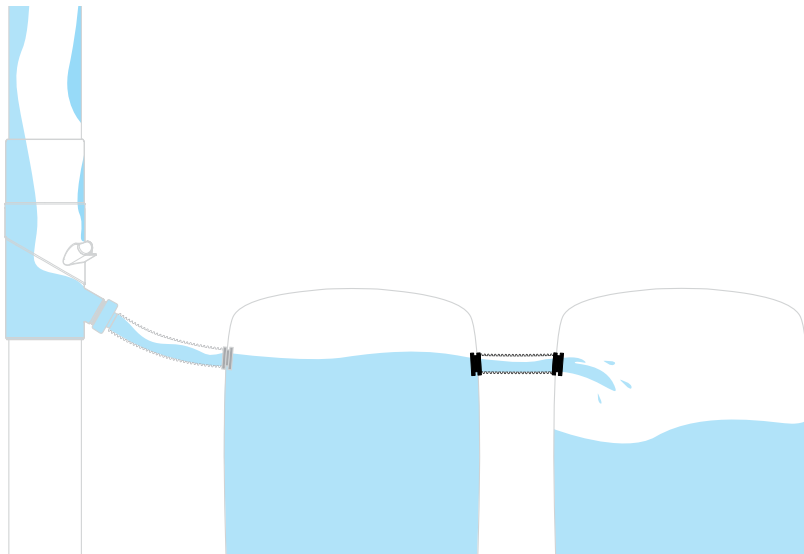

INSTALLATION

1. Select a position to install your Rain Barrel Linking Kit. To maximise storage volume, you will want to install your linking kit towards the top of your rain barrel.
2. Using a cordless drill and the supplied hole saw, drill a hole in the first rain barrel where you will be installing your outlet. Ensure the edges of the hole are free from burrs.
3. Take the main body of your Rain Barrel Outlet and insert it through the hole so that the barbed end is sticking out of the barrel.
4. Holding the main body in place, screw the nut onto the outside of the Rain Barrel Outlet and tighten using a spanner.
5. Repeat steps 2 to 4 for your other Rain Barrel Outlet.
6. Using a knife, cut your 32mm hose to suit the distance between your Rain Barrel Outlets. For optimum performance, ensure that the hose forms a nice smooth path for unrestricted water flow.
7. Loosen both the stainless steel hose clamps with a screwdriver and place one on each end of the hose.
8. Press one end of the hose onto the first Rain Barrel Outlet so that it covers all of the barbed section. It should push on with a moderate amount of force, but softening the end of the hose with some warm water may make this easier if required.
9. Tighten the hose clamp, making sure it is gripping both the hose and the outlet.
10. Press the opposite end of the hose onto the other Rain Barrel Outlet and tighten the hose clamp.