

# **INSTALLATION AND FILLING OF PILLOW TANKS**

## **1.) ON SITE GROUND PREPARATION**

- A. Locate the tank on level ground for maximum gallons.**
- B. Clear area from any debris and use ground pad or plywood for protection of the tank.**
- C. Make sure the tank is protected from traffic flow.**
- D. Installing the tank under a crawl space follow steps A, B & C. Make sure the tank has enough clearance from the floor joists and no sharp objects are protruding down.**

## **2.) FILLING THE PILLOW TANK (No pressure relief valve)**

- A. Filling the tank from the 4” opening or the ball valve. Make sure the ball valve is in the closed position. Unscrew the red cap and insert the hose and begin filling. DO NOT LEAVE THE TANK UNATTENDED!**
- B. When water overflows from the opening remove the hose and screw on the cap.**
- C. When filling from the ball valve. Remove the red cap, attached the hose to the ball valve, open the valve and begin filling. DO NOT LEAVE THE TANK UNATTENDED! When you see water overflowing from the 4” opening shut off the flow and screw on the red cap.**

**\* REMEMBER IF THE TANK HAS NO RELIEF VALVE YOU MUST HAVE AN OVERFLOW OPENING!**

**\* THESE TANKS ARE NOT TO BE HUNG BY THE EYELETS. EYELETS ARE ONLY TO BE USED WHEN SECURING THE TANK TO THE GROUND OR TRUCK BED!**